

# Montage- und Bedienungsanleitung



LED-Panel: 552-540-40, -70

## Sicherheitshinweise zur Montage und Betrieb von Leuchten

- Anschluss darf nur vom Elektriker durchgeführt werden.
- Bei der Montage sind die örtlichen Vorschriften zu beachten.
- Die Leuchten sind für den Deckeneinbau bestimmt.
- Nicht bestimmungsgemäßer Gebrauch entbindet uns von Haftungsansprüchen.
- Die max. zulässige Deckenlast beachten
- Alle Angaben auf Vorschaltgerät und Leuchte sind zu beachten.
- Blicken Sie nicht direkt in die eingeschalteten LED und blenden Sie keine anderen Personen damit.
- LED, Leuchte und Vorschaltgerät erwärmen sich im Betrieb. Abstand hinter der Leuchte: min. 5cm
- Leuchte und Vorschaltgerät nicht abdecken und vor Fremdwärme schützen.
- Abstand zur angestrahlten Fläche: min. 0,20m
- Sind Leitungen an Leuchte oder Vorschaltgerät beschädigt, müssen diese sofort vom Netz getrennt werden.
- Beschädigte Leitungen sind sofort durch Leitungen vom Hersteller zu ersetzen
- Netzspannung: 100 - 240V, 50Hz
- max. Leuchtenanzahl an einer B16A Sicherung: 30 Stück
- Leuchtenteile dürfen nicht entfernt oder verändert werden
- Anschluss nur an geeignete Vorschaltgeräte mit entsprechender Leistung
- Bei Flackern oder Totalausfall sofort die Leuchte stromlos schalten.
- Wartungs- und Reinigungsarbeiten nur bei abgeschalteter Leuchte durchführen.
- Die Leuchte kann mit einem weichen, feuchten Tuch gereinigt werden.
- Verwenden Sie keine Reinigungs- oder Scheuermittel.

## Montage:

Befestigen Sie die Montagefedern vor der Leuchtenmontage.

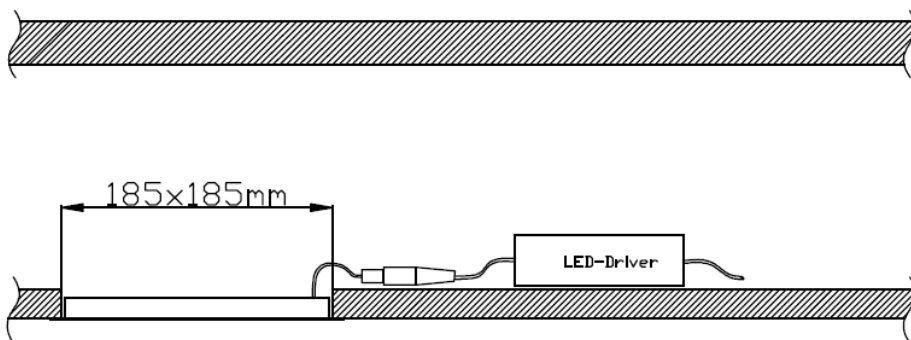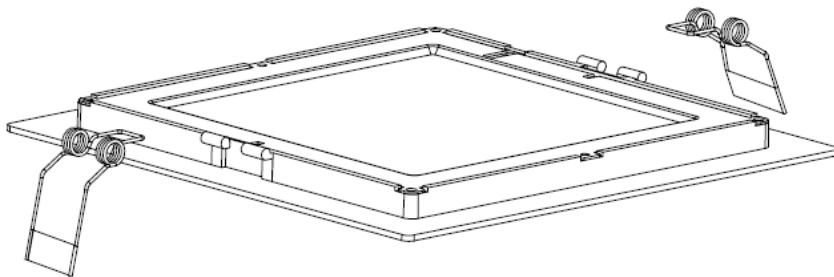

## Mounting an Operating Instructions

### LED-Panel: 552-540-40, -70

#### Safety instructions for the operating and assembly of fixtures

- The fixture must only be connected by a fully qualified electrician
- Observe all safety regulations when assembling
- The fixture is created for mounting in ceiling.
- The warranty will not apply in cases of: normal wear and tear, changes, modifications, damage caused by carelessness, external influences, any application this product is not meant for.
- Ensure the ceiling loading level is observed.
- Observe the safety instructions included with fixture and ballast.
- Don't look into the LED if the power is on. Don't let other people look into it.
- LED, fixture and ballast become hot during use. Distance behind the fixture min. 5cm.
- Don't cover fixture and ballast. Save them from external heat.
- Minimum distance to irradiated surface: 0,20m
- If any wires of the fixture are damaged, the fixture must be switched of.
- Damaged wires must be replaced only by wires supplied by the manufacturer.
- Mains connection: 100 - 240V, 50Hz
- max. counts that may be connected to one 16A circuit breaker are 30 pcs.
- Do not remove or modify parts of the fixture.
- Only connect to suitable ballast matching the fixture power.
- If the fixture flickers or goes out, immediately switch off the fixture, and disconnect the power supply.
- Do servicing and cleansing work only while the fixture is switched off.
- The fixture can be cleaned with a soft, humid cloth.
- Use no cleaning agent or abrasive.

#### Mounting

Before you can mount the fixture, you have to install the mounting clips.

